

JBR Hyundai 5MM Wheel Spacer Installation Instructions



Tooling:

- ✓ Jack and jack stands
- ✓ Torque wrench
- ✓ Lug wrench
- ✓ Wire brush/wheel
- ✓ Sand paper

Parts List:

✓ 1 or 2 pair of JBR 5mm wheel spacers

FAILURE TO CORRECTLY INSTALL THIS PRODUCT WILL RESULT IN THE LOSS OF WHEEL(S) WHILE DRIVING

1. Begin by parking on a smooth level surface with the emergency brake engaged. Jack up the front right side of the vehicle and position jack stand underneath for safety and support.

Refer to you vehicles owner's manual for proper jack placement and supporting procedures. Never get under a vehicle without the proper support in place.

2. Remove the wheel from the vehicle and inspect the back side where it mates to the hub/rotor for any signs of corrosion. Remove with sand paper, wire brush or wire wheel if necessary.

3. Inspect the hub/rotor for any signs of corrosion. Remove with sand paper, wire brush or wire

wheel if necessary.



4. Place your new JBR 5mm Wheel Spacer on the hub.



5. Reinstall the wheel and hand tighten the lug nuts as much as possible. Lower the vehicle.

6. Torque the lug nuts to 100 ft/lbs following the sequence below.



7. Repeat steps 1 -6 for the remaining 3 wheels.

IMPORTANT NOTICE OF WARNING

Prior to moving the vehicle, check for any potential interference with other parts.

Check and re-tighten lug bolts/lug nuts often. When first installed lug bolts/lug nuts should be checked and re-tightened after 5, 15, 25, 50 and 100 miles and continue rechecking for the next few hundred miles of driving.

If you discover any loose lug bolts/lug nuts, retighten and check again after 5, 15, 25, 50 and 100 miles and continue rechecking for the next few hundred miles of driving.