



2014 & up Mazda 3 Rear Wiper Delete Installation Instructions

Tooling:

- ✓ Ratchet wrench
- ✓ 10mm Socket
- ✓ Flat head screwdriver
- ✓ 4mm allen wrench

Parts List:

- ✓ Wiper delete outer cap
- ✓ Wiper delete inner cap
- ✓ 6mm socket button head screw
- ✓ 6mm flat washer
- ✓ 6mm lock washer
- ✓ Rubber Washer
- ✓ O-ring

**Please be sure to read and understand the instructions thoroughly before beginning.

1. Remove the cover from the wiper arm by spreading the ears and pulling it off. Then, use a 10mm socket to remove the retaining nut. Wiggle the arm loose and remove it from the vehicle.



2. Remove the center section of interior plastic from the hatch by pulling straight towards you.



3. Remove both side pieces of trim using a flat head screw driver to remove the plastic push-pin fasteners.




To remove the tray cable holders pull the center pin out and remove the fastener.



Pull the trim towards you and to remove



4. Next, use a flat head screw driver to remove the plastic push near the latch assembly and the two on either side.

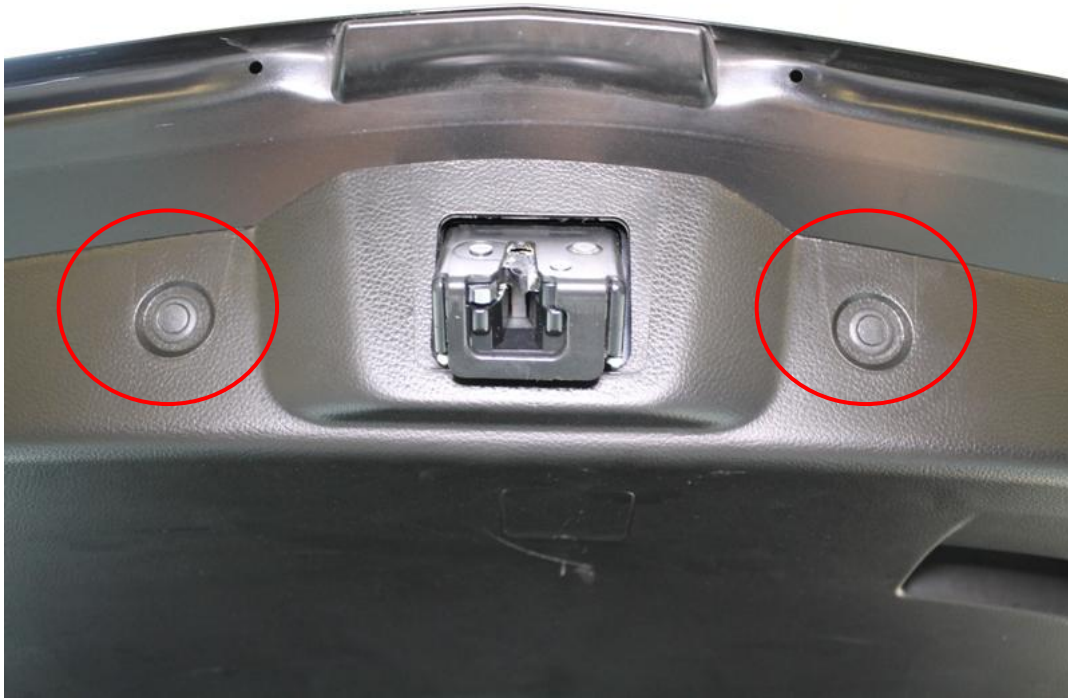


5. Remove the handle trim by pushing up and pulling out.



6. Next, pull the main section of interior trim away from the hatch.



7. With the wiper motor assembly now exposed. Remove the three 10mm bolts and the wiring connector. Remove the wiper motor from the vehicle.

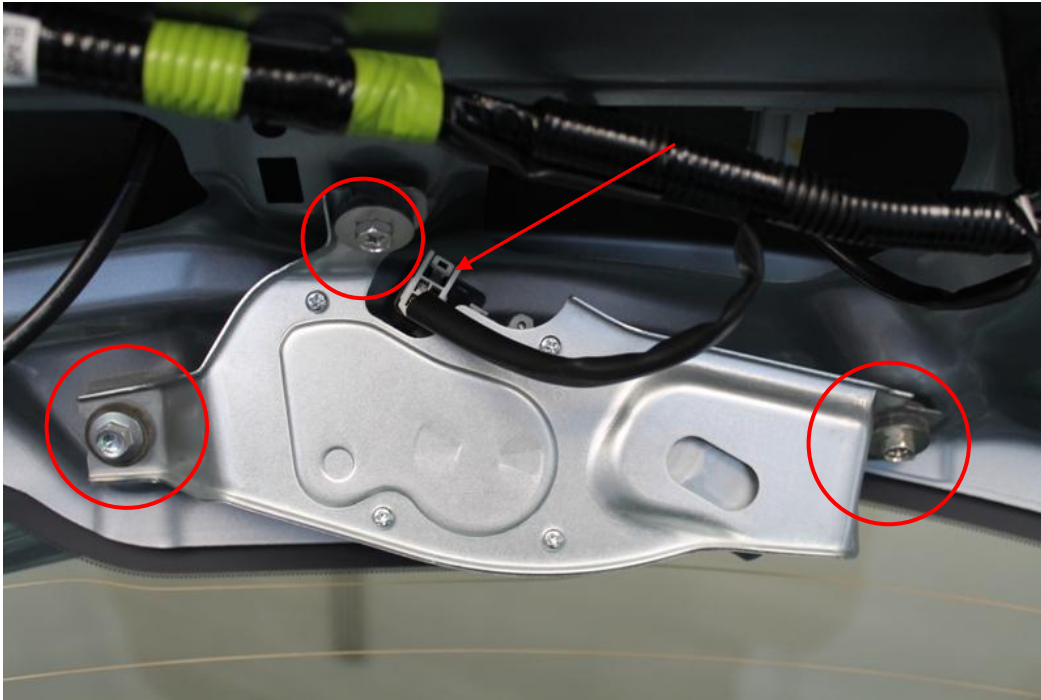

8. Remove the rubber seal by collapsing it inwards and pulling it through.



- Put the outer cap in place on the outside of the glass. Put the flat washer, then the lock washer on the 6mm bolt provided. Slip it through the inner cap and put the rubber washer over the bolt. Thread the inner cap into the outer cap and tighten.



**Congratulations!! This completes the installation of your new
JBR Rear Wiper Delete Kit!!**

Copyright © 2017 James Barone Racing LLC. Any unauthorized reproduction or publication of this document is strictly prohibited without the written consent of James Barone Racing.